


QCY-T18 真无线蓝牙耳机

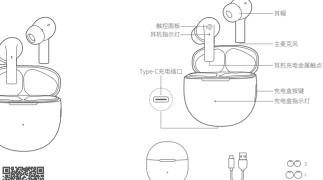

充电盒

本说明书中的图片均为示意图,可能与实物有偏差,请以实 物为准。

Type-C充电线

耳帽

认识耳机





一键切换配对设备: (此步骤为A设备切换B设备)

1. 左右耳机在充电盒中, 打开盖子, 长按盒子按键约4秒; 2. 一个耳机长亮蓝灯,另一个耳机蓝灯闪,指示当前耳机正 处于和设备配对中, 在设备上搜索耳机, 点击连接。

一台耳机同时连接两台设备

1.打开盖子, 耳机连上A设备蓝牙, 连上后关闭蓝牙; 2.打开B设备蓝牙连接上耳机后,再打开A设备蓝牙,点击配对 记录 "OCY-T18" 即可完成耳机同时连接两台设备。

恢复出厂设置

1. 左右耳机在充电盒中, 打开盖子, 长按盒子按键约10秒; 2. 耳机闪白灯,指示耳机正在恢复出厂设置;恢复出厂设置 完成后, 耳机自动进入和手机配对模式。



充电盒充电

充电中: 红色指示灯长亮 充满电: 蓝色指示灯长亮

充电盒亮灯提示

蓝灯, 充电盒电量高: ≥20% 红灯, 充电盒电量低: < 20%

本产品附多副耳帽,请洗择您感觉最舒适, 吉音体验最佳的

1.将耳帽斜向下轻轻塞入耳道,以轻摆头部耳机不晃动为官。

2.通话时,将耳机麦克风朝向嘴部可使通话更清晰。

佩戴耳机

一副。

3.请正确佩戴左右耳机,入耳后使其稳固贴合耳廓及出音口对 准耳道。

功能操作



使用前,请下载安装OCY手机APP客户端

以获得更便捷的耳机操控体验

机:长按触控面板约1.5秒

机: 把耳机放入充电盒, 关盖

€ 接听/挂断:双击触控面板

护接电话:长按触控面板约1.5秒

№ 上 一 曲: 长按左触控面板 ▶ 下 一 曲: 长按右触控面板

● 语音助手:三击左耳触控面板

⚠ 播放/暂停:双击触控面板播放/暂停

@ 游戏模式:三击右耳触控面板

OCY蓝牙耳机售后服务

- QCY蓝牙耳机售后服务承诺: 严格按照《中华人民共和国消费者权益保护 《中华人民共和国产品质量法》实行售后三包服务,服务内容如下 在三包有效期内,您可凭购物凭证依照本规定享受免费的修理、更换、退货
- 1、自您购买之日起7日内,本产品出现故障,经由QCY售后服务中心确定为产品 质量问题,可享受修理、更换、退货的服务。 2. 自您购买之日起15日内,本产品出现故障,经由OCY售后服务中心确定为产
- 品质量问题,可享受修理或更换的服务。
- 3、自您购买之日起12个月内,本产品出现故障,经由OCY售后服务中心确定为 产品质量问题,可享受修理的服务。

售后服务与支持

自产品购买之日起12个月(请妥善保管购买凭证)。

免费服务

在产品保修期内,凡属产品本身质量引起的故障,请用户凭购买凭证与经销商取 得联系以享受售后服务。 如有任何产品损害或瑕疵非可归责于产品质量本身,则不在保修范围内。有下列

情形者不属于保修范围内 1、因天灾、地震、雷击、异常电压、环境因素而发生之故障或毁损的。

2、自行或委托未经原厂授权维修之厂商拆卸、改装或更换非原厂零件。

3、未按使用手册操作或因人为使用不当而造成损坏者,如产品浸水、腐蚀、掉 落、挤压或器在异常温湿度环境下。

三包凭证

| 产品信息 | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|
| 产品型号 | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 订单编号 | | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 用户信息 | : | | | | | | | | | | | | | | | | | | | | | | | | |
| 用户姓名 | | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 联系电话 | | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 用户地址 | | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 退换货原因 | | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |
| 购买信息 | : | | | | | | | | | | | | | | | | | | | | | | | | |
| 销售单位 | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | _ | |

FAO

耳机配对

- 1.0: 只有一只耳机有声音怎么解决?
- A: 将两只耳机放回充电仓关盖, 再重新取出, 查看双耳是 否都有声音, 若还是只有单只耳机有声音, 请对两只耳 机恢复出厂设置。
- 2.0: 手机提示无法连接怎么解决?
- A: 将手机上的配对记录删除, 删除后重新进行搜索配对连 接即可。
- 3.O: 听歌/通话没声音怎么解决?
- A: 安卓手机在蓝牙连接名字的右边有个设置图标,点击进 入,关闭手机音频和媒体音频,再重新开启,若还是无 声,请将耳机重新与手机配对连接。
- 4.Q: 为什么视频/游戏有延迟?
- A: 受使用环境、网络、手机编解码等因素的影响, 会引起 手机传送音频数据到耳机时有不同程度的延迟。
- 5.0: 听到的声音卡顿/断续怎么解决?
- A: 在使用时若周围有大量的 Wi-Fi、5G/4G 信号、大功率 电器等等产生干扰,可能会引起卡顿、断续的情况,换 个环境或者重新配对连接就可以解决了。

若有售后服务需求, 请联系客服 电话: 4008-306-708 网址: www.qcy.com

制造商: 东莞市和乐电子有限公司 地址: 广东省东莞市道滘镇粤晖路325号

提示

- 1. 使用产品前请仔细阅读本使用说明书并请妥善保管;
- 2. 首次使用时, 请先将本产品充满电;
- 3. 如果产品长期(超过2个星期)不用, 请对其充电;
- 4. 必须选择正规厂家生产且经过国家CCC认证的充电器;
- 5. 若手机无法搜索到蓝牙耳机,请将蓝牙耳机重新进入配对 模式或将蓝牙耳机恢复出厂设置, 若手机程序出错, 请把 手机蓝牙关闭再开启或重启手机。
- 请勿以任何理由拆除或维修改装耳机,否则可能会导致起火, 电子击穿甚至彻底损坏本品;
- 请勿将产品置于温度过低或过高(0°C以下或45°C以上的环境 下);
- 请避免靠近儿童或动物的眼睛使用产品指示灯;
- · 请勿在雷暴天气下使用该产品, 雷暴可导致本产品工作不正 常,并增加触电的危险;
- 请勿用油及其他挥发性液体擦拭本产品;

注意:长时间使用耳机可能会造成听力损害,请合理安排使用 时间。

产品有害物质名称及含量

| | 有害物质 | | | | | | | | | | | |
|-------|-----------|-----------|-----------|-----------------|---------------|---------------------|--|--|--|--|--|--|
| 部件名称 | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴 二苯醚 (PBDE) | | | | | | |
| 外 売 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | |
| 电路板组件 | X | 0 | 0 | 0 | 0 | 0 | | | | | | |
| 电 池 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | |
| 充 电 线 | X | 0 | 0 | 0 | 0 | 0 | | | | | | |
| 附 件 | 0 | 0 | 0 | 0 | 0 | 0 | | | | | | |

本表格依据SJ/T 11364的规定编制

- O:表示该有害物质在该部件所有均质材料中的 含量均在GB/T 26572 规定的限量要求以下。
- X:表示该有害物质至少在该部件的某一均质材 料中的含量超出 GB/T 26572 规定的限量要求

使用年限

如本手册所述,在正常使用条件下,本产品的环保使用 期限为10年。

在此期间,产品不会泄露任何危险物质,本产品可以 回收,必须按照当地法规处理。
















True Wireless Farhuds



For better using experience, please scan to download QCY APP before start-up.

Overview

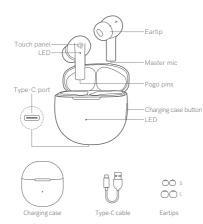

The above pictures are for reference only and practical items may vary.

How to Connect

Open lid to power on earbuds. On phone, search QCY-T18 and tap to connect. If you power them on again, they will auto reconnect to the last device in connectivity records, if any.



How to Switch Connection Between Two Devices

Push earbuds into case, open lid and keep pressing charging case button for 4s or until LED on one earbud glows solid blue while the other blinks blue. On device, search QCY-T18 and tap to connect.

Multi-Point Connection

1. Open lid and earbuds will auto get connected with DeviceA. Then turn off Bluetooth function on DeviceA.

2.On DeviceB, search and tap QCY-T18 to connect. Then turn on the function on DeviceA and tap QCY-T18 to finish Multi-Point Connection.

Factory Setting

- 1. Push earbuds into case and open case. Hold the button on case for 10s to set them to factory.
- 2. LEDs on earbuds blinks white means they are getting reset. After factory resetting, earbuds will auto turn connectable to



Charge the Case

LED glows solid red when the case is charging LED glows solid blue when the case is topped up.


LED on Case

Battery level of case ≥ 20% (Blue) Battery level of case < 20% (Red)

Please choose eartips to fit yourself

- 1. Push earbuds into ear canel and shake head to check stability.
- 2. Adjust mic towards mouth to gain better calling experience.
- 3. Please put on earbuds properly, getting sound hole towards

Instruction

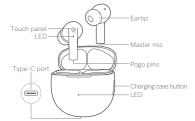

- (b) Power-on: keep touching the panel for 1.5s
- (ii) Power-off: push earbuds back in case and close lid
- Answer/end call: double touch the panel
- (c) Ignore call: keep touching the panel for 1.5s
- Skip track backward: keep touching left panel
- (P) Skip track forward: keep touching right panel
- Voice assistant: triple touch left panel
- Playback/pause; double touch the panel (A) Gaming mode: triple touch right panel

Warranty Card

Warranty Period

12 months after you purchase this item (or you may inquire your local shopper for more details).

Free Service:

Supposing any defects caused by quality issues occur within the warranty period, please take this warranty card and purchase receipts to your distributor for free exchange service.

| Model Number: | | | | | | | | | | |
|----------------------------------|--|--|--|--|--|--|--|--|-----------|--|
| Date of Purchasing: User's Name: | | | | | | | | | | |
| | | | | | | | | | | |
| User's Address: | | | | | | | | | | |
| Shop's Name: Shop's Address: | | | | | | | | | | |
| | | | | | | | | | Comments: | |
| | | | | | | | | | | |
| | | | | | | | | | | |

Free exchange service will not be accessed under following circumstances:

- 1. Damages caused unauthorized disassembly.
- 2. Defects or physical damages caused by leaking or
- 3. Damages by act of God. Supposing your item is within any damages or defects except the above circumstances, please return to us or your distributor for free repairing.

FCC Statement

This equipment has been tested and found to comply with the imits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Zips

- 1. Before using the earbuds, please read the manual carefully and keep it for future references.
- 2. The earbuds need to be fully charged prior to first-time use.
- 3. If the earbuds are left unused for over two weeks, please
- 4. Please use the chargers made by qualified manufacturer.
- 5. If earbuds fail to be found by phone, please re-turn them connectable or restore factory settings. If a program error of phone occurs, please turn off and on Bluetooth function or reboot the phone.

Caveats

- 1. Never disassemble or modify your earbuds for any reasons to avoid any damages and danger
- 2. Do not store the earbuds in extreme temperatures (under 0°C or over 45°C).
- 3. Avoid using the indicator close to the eyes of children or
- 4. Do not use the earbuds during a thunderstorm to avoid dysfunction and increasing risk of electricshock.
- 5. Do not use harsh chemicals or strong detergents to clean the earbuds.
- Note: please do not use earbuds for a long time as may damage your hearing.

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time. Manufacturer: Dongguan Hele Electronics Co., Ltd. Address: No. 325 Yuehui Rd. Daoiiao Town Dongguan City Guangdong Province China



How to Wear









